PixLite A4-S Mk3 Quick Start Guide 1 - Physical Connections

In order to connect to the PixLite A4-S Mk3, there must be a working power supply between 5 – 24Vdc connected to the power input. Simply lift up each lever, insert the power wires (with the correct polarity), and clamp the levers back down. An Ethernet cable should also be connected to either of the Ethernet Ports, allowing connection to a local network, or directly to a PC.

These ports and the reset button (for Section 2.1) are shown in Figure 1 below.



Figure 1: Connection Points & Reset Button

2 - Startup & Network Connection

2.1 - Factory IP Start-up

The controller will start up in DHCP mode as a factory default. Currently, there is no Advatek Assistant tool that can discover PixLite Mk3 controllers when they are on a network - Advatek Assistant 3 will be coming soon.

As a result, the easiest method for connecting to the PixLite A4-S Mk3 is by starting it up in Factory IP mode. To do so, follow the steps below:

- 1. Power up the PixLite. The Multi Color Status LED should be flashing green, indicating normal operation.
- 2. While the controller is running, hold down the "Reset" button for 3 seconds.
- 3. Release the button.
- 4. The controller will immediately restart its application with the following factory default network settings:

IP Address:	192.168.0.50
Subnet Mask:	255.255.255.0
Gateway Address:	0.0.0.0

2.2 - PC Network Configuration

Once the PixLite is in its Factory IP, you will need to ensure that the network adapter of your computer is set in the IP range that the PixLite is now in. This means your PC's IP should be 192.168.0.xxx where xxx is anything between 1 and 254, other than 50. The subnet mask on your PC should be set to 255.255.255.0. If you are not sure, you can try the following example settings:

IP Address:	192.168.0.10
Subnet Mask:	255.255.255.0
Gateway Address:	0.0.0.0

An example of these settings on a Windows PC is shown in Figure 2 below.

Figure 2: Network Configuration on a Windows PC

Internet Protocol Version 4 (TCP/IPv4) Properties		×	
General			
You car this cap for the	n get IP settings assigned autor ability. Otherwise, you need to appropriate IP settings.	natically if your network supports ask your network administrator	
00	btain an IP address automatical	ly	
O Us	se the following IP address: —		
IP ac	ddress:	192.168.0.10	
Subr	net mask:	255.255.255.0	
Defa	oult gateway:		

2.3 - Configure the PixLite using any Web Browser

You can now use any modern browser to connect to the PixLite A4-S Mk3. Simply type in 192.168.0.50 in the address bar and hit Enter. The Management Interface should open, where the PC will automatically login with the default blank password, and then take you to the Home page.

The IP address of the PixLite should then be modified to suit your installation. This can be done on the IP Address page, by enabling "Static" mode, and entering in the IP Address of choice, as shown in Figure 3 below. To save this IP configuration to the PixLite, simply press "Apply & Save". The PixLite will then save the configuration and change to the new IP address.

You can now reconfigure your computer's IP settings to be in the same range as the PixLite's new IP address. Type in the new IP Address of the PixLite into the address bar and hit Enter to reconnect to the PixLite.

	\ T E K	PixLite A4-S Mk3 Default Nickname
Home Test Mode Statistics	IP Address	;
	IP Mode	Static
Aux Port Pixel Outputs	IP Address:	102.168.1.50
Pixel Data	Subnet Mask:	255.255.255.0
Configuration Firmware Update Security	Gateway Address:	192.168.1.1
About Help Logout	APPLY APPLY	I SAVE

Figure 3: IP Address Configuration with the Management Interface

3 - Further Information

For a more in-depth understanding of the device, including physical installation, electrical connections, network connections, operation, and specifications, you should consult the PixLite A4-S Mk3 User Manual:

www.advateklights.com/downloads/user-manuals/pixlite-a4-s-mk3

To learn how the Management Interface can be used for management, configuration, and monitoring the device's performance, see the PixLite Mk3 Management Guide: www.advateklights.com/downloads/user-manuals/pixlite-mk3-management-interface

4 - Warranty Registration

For your complete peace of mind, this PixLite A4-S Mk3 comes with an industry leading extended warranty period of 5 years, subject to registration.

Please register your Advatek PixLite® Mk3 product using the link below. www.advateklights.com/warranty-registration

All products need to be used and installed in accordance with their designed purpose and operating environment. See our Store Policy below for full terms and conditions on returns, faults and warranty claims.

www.advateklights.com/store-policy