


# PixLite E16-S Mk3 Quick Start Guide

## 1 - Physical Connections

In order to connect to the PixLite E16-S Mk3, there must be a working power supply between 5 – 24Vdc connected to the power input, which is the small screw terminal marked "+" & "-". The screws should be loosened for wire insertion and then tightened again, providing a highly robust and secure connection. Polarity for the connector is clearly marked on the lid.

These ports are shown in [Figure 1](#) below.

*Figure 1: Connection Points*

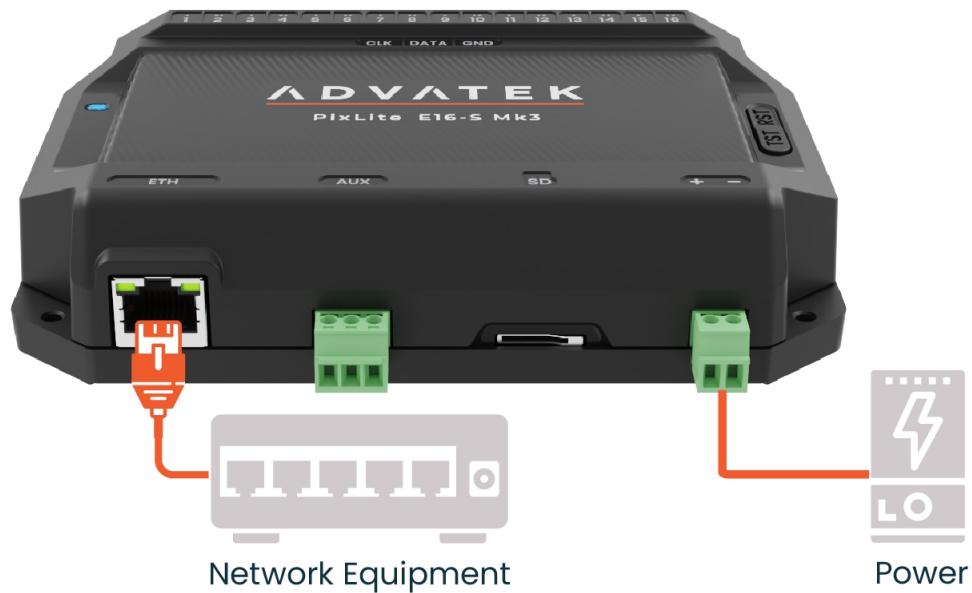

# 2 - Startup & Network Connection

## 2.1 - Startup

Upon power up, the controller will start up in DHCP mode and the status LED will flash green, indicating normal operation.

The easiest method for connecting to the PixLite E16-S Mk3 is by launching Advatek Assistant 3 to discover the device. Advatek Assistant 3 can be downloaded and installed, using the URL below:


<https://www.advateklights.com/advatek-assistant-3>

## 2.2 - Advatek Assistant 3

Any active PixLite devices on the network will automatically be discovered and displayed. Double click to open its Management Interface, and begin configuring your new PixLite E16-S Mk3.

The main view of Advatek Assistant 3 is shown in **Figure 2** below:

Figure 2: Advatek Assistant 3

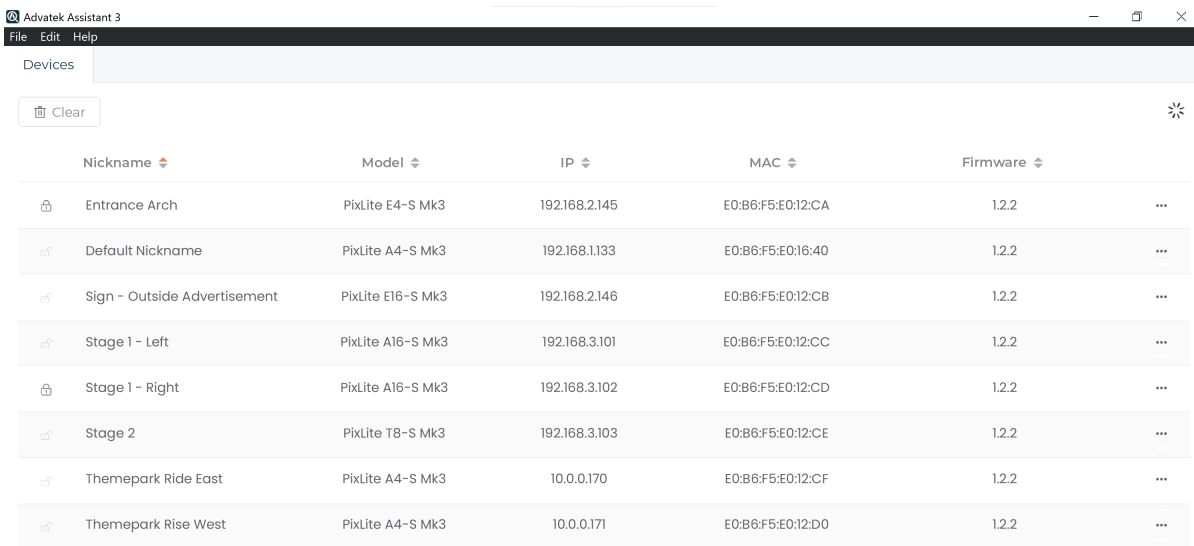

The screenshot shows the Advatek Assistant 3 application window. The title bar reads "Advatek Assistant 3" and the menu bar includes "File", "Edit", and "Help". Below the menu bar is a "Devices" section with a "Clear" button and a refresh icon. The main area contains a table with the following columns: Nickname, Model, IP, MAC, and Firmware. Each row represents a discovered device and includes a double-click icon on the left and a three-dot menu icon on the right.

Nickname	Model	IP	MAC	Firmware
Entrance Arch	PixLite E4-S Mk3	192.168.2.145	E0:B6:F5:E0:12:CA	1.2.2
Default Nickname	PixLite A4-S Mk3	192.168.1.133	E0:B6:F5:E0:16:40	1.2.2
Sign - Outside Advertisement	PixLite E16-S Mk3	192.168.2.146	E0:B6:F5:E0:12:CB	1.2.2
Stage 1 - Left	PixLite A16-S Mk3	192.168.3.101	E0:B6:F5:E0:12:CC	1.2.2
Stage 1 - Right	PixLite A16-S Mk3	192.168.3.102	E0:B6:F5:E0:12:CD	1.2.2
Stage 2	PixLite T8-S Mk3	192.168.3.103	E0:B6:F5:E0:12:CE	1.2.2
Themepark Ride East	PixLite A4-S Mk3	10.0.0.170	E0:B6:F5:E0:12:CF	1.2.2
Themepark Rise West	PixLite A4-S Mk3	10.0.0.171	E0:B6:F5:E0:12:D0	1.2.2

## 3 - Further Information

For a more in-depth understanding of the device, including physical installation, electrical connections, network connections, operation, and specifications, you should consult the PixLite E16-S Mk3 User Manual:

[www.advateklights.com/downloads/user-manuals/pixlite-e16-s-mk3](http://www.advateklights.com/downloads/user-manuals/pixlite-e16-s-mk3)

To learn how the Management Interface can be used for management, configuration, and monitoring the device's performance, see the PixLite Mk3 Management Guide:

[www.advateklights.com/downloads/user-manuals/pixlite-mk3-management-interface](http://www.advateklights.com/downloads/user-manuals/pixlite-mk3-management-interface)

## 4 - Warranty Registration

For your complete peace of mind, this PixLite E16-S Mk3 comes with an industry leading extended warranty period of 5 years, subject to registration.

Please register your Advatek PixLite® Mk3 product using the link below.

[www.advateklights.com/warranty-registration](http://www.advateklights.com/warranty-registration)

All products need to be used and installed in accordance with their designed purpose and operating environment. See our Store Policy below for full terms and conditions on returns, faults and warranty claims.

[www.advateklights.com/store-policy](http://www.advateklights.com/store-policy)