## **RF Wireless Touching LED Remote Controller**

( Both Color temperature and Brightness Adjusting)

- Technical Parameters(remote control):
  - 1:Power supply: AAA battery \* 3pcs
  - 2:Cover material ABS
  - 3: Fabrication processing: multicolour printing & UV varnish
- Technical Parameters(controller):
  - Working voltage:DC12V24V
  - 2. Output control: 2 circuits
  - 3. Control current: 6A/circuit
  - 4. Connecting method: common anode
  - 5. Dimension: L85\*W64\*H24
  - Receiving range:20meters
- 3. Functions of Keys
  - Key 1:on
  - 2. Key 2:off
  - Key 3:highest brightness
  - Key 4:medium brightness
  - 5. Key 5:lowest brightness
- 4 How to use
  - 1.Brightness Adjusting :Use your finger to touch the left half part of color ring ,you can change the brightness from the highest to the lowest(100%-1%,20 grades of Brightness to adjust).
  - 2.Color temperature Adjusting: Use your finger to touch the right half part of color ring, you can adjust the temperature from warm white to cool white(11grades to adjust).
  - 3. Resume fuction. The previous settings will be resumed while power on again.
  - 4.Matching code

Press Key 3 once within 3 seconds when power on again, the light will blink 3 times if matching is successful.

5.Clearing Code

Press Key 3 five times within 3 seconds when power on again, the light will blink 6 times if clearing is successful.

## 5 Caution:

Please don't touch or press the color ring while loading the battaries to protect the sensitiveness. Please use the remote controller 3 seconds after the battaries are loaded. Please reload the battaries when you find the color ring is not sensitive.

## Connecting Chart



