










## MR-16 TRIM RING INSTALLATION

The intent of this document is to help with the installation of your new MR-16 trim ring kit. These are basic instructions to help get started. Due to differences in building codes and installation environments, the order of some steps may need change. Be sure to follow any applicable local laws and regulations with regard to this installation.

<p><b>STEP 1</b></p>	<p>Cut 2 ½ in/62 mm hole in your installation surface. You may download and print a Template that is available at <a href="http://www.iluminarc.com">www.iluminarc.com</a> . Each ring contains 2 springs (attached) and a retaining ring. (Fig. 1)</p>  <p style="text-align: center;">Fig. 1</p>
<p><b>STEP 2</b></p>	<p>Compress springs together. (Fig. 2) Insert ring into opening. ( Fig. 3 thru 5)</p>     <p style="text-align: center;">Fig. 2      Fig. 3      Fig. 4      Fig. 5</p> <p>(<b>Note:</b> depending on the installation environment, you may need to follow <b>Steps 3–4</b> before this step.)</p>
<p><b>STEP 3</b></p>	<p>Insert the product into the trim ring. (Fig. 6)</p>  <p style="text-align: center;">Fig 6</p>
<p><b>STEP 4</b></p>	<p>Insert the retaining ring. (Fig 7 and 8). Be sure to line the ring up with the notch in the sidewall of the trim ring.(Fig.9)</p>    <p style="text-align: center;">Fig 7      Fig 8      Fig 9</p>